


**JOOLA X-Glue Green Power**

1. Pour **X-Glue** onto the sponge of the rubber and on the blade and spread it with the sponge roller.

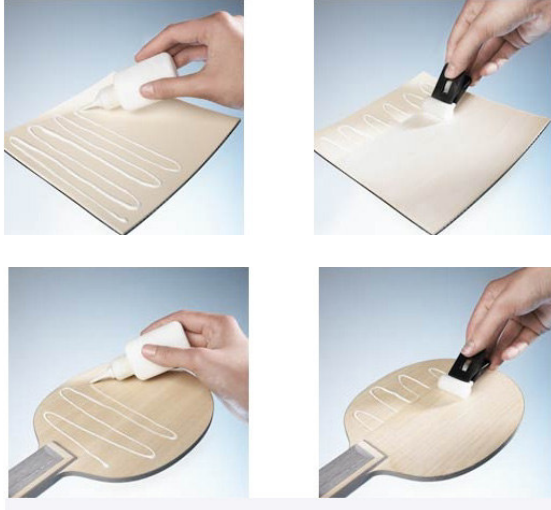

2. Wait until glue is dry (glue will be transparent, approx. 4-5 minutes).
3. Attach rubber onto the blade.

**Please note: Use sponge roller only once!**